SCOSCHE®

TA2051

2004 TOYOTA SIENNA KIT

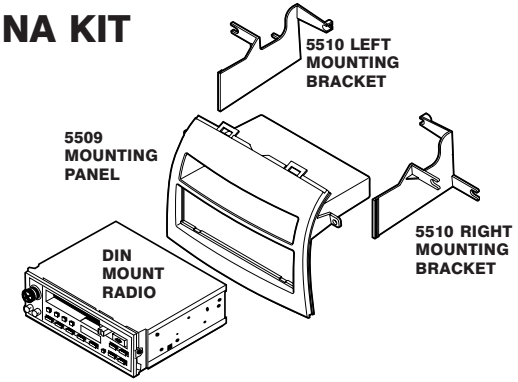

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche TA2051 Kit. This kit was manufactured with the highest of quality standards.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

MOUNTING BRACKETS ASSEMBLY

A. ATTACHING MOUNTING BRACKETS (FRONT):

Align the (2) "L" wedges with location openings on the kit panel. Pressure fit, push into locations unit in place.

B. ATTACHING MOUNTING BRACKETS (BACK):

Align mounting hole of mounting bracket with hole locator on pocket slide bracket on hole locator on pocket.

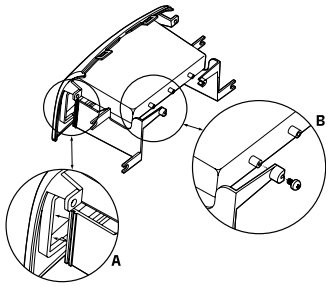

VEHICLE DISASSEMBLY

2004 TOYOTA SIENNA

RADIO REMOVAL AND IN-DASH INSTALLATION

1. Carefully unsnap and remove trim panels from left and right of radio. Unplug and remove.
2. Carefully pry up on trim panel at top of radio. Unsnap and remove.
3. Remove (4) bolts securing factory radio. Unplug and remove.

WIRE CODES

For Factory Wiring Codes go to: www.scosche-cars.com or call.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit in the listed vehicles. Manufacturer cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions call: **TECH HELP 1-800-621-3695x3**

© 2004 SCOSCHE INDUSTRIES, INC.

SCOSCHE®

TA2051

2004 TOYOTA SIENNA KIT

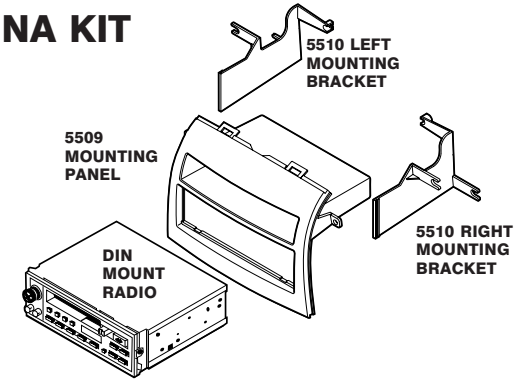

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche TA2051 Kit. This kit was manufactured with the highest of quality standards.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

MOUNTING BRACKETS ASSEMBLY

A. ATTACHING MOUNTING BRACKETS (FRONT):

Align the (2) "L" wedges with location openings on the kit panel. Pressure fit, push into locations unit in place.

B. ATTACHING MOUNTING BRACKETS (BACK):

Align mounting hole of mounting bracket with hole locator on pocket slide bracket on hole locator on pocket.

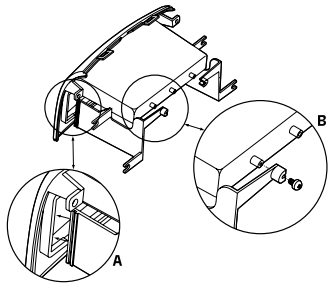

VEHICLE DISASSEMBLY

2004 TOYOTA SIENNA

RADIO REMOVAL AND IN-DASH INSTALLATION

1. Carefully unsnap and remove trim panels from left and right of radio. Unplug and remove.
2. Carefully pry up on trim panel at top of radio. Unsnap and remove.
3. Remove (4) bolts securing factory radio. Unplug and remove.

WIRE CODES

For Factory Wiring Codes go to: www.scosche-cars.com or call.

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit in the listed vehicles. Manufacturer cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions call: TECH HELP 1-800-621-3695x3

© 2004 SCOSCHE INDUSTRIES, INC.

SI 10/04 - TA2051 (3000003)